

How to Use

PROGRAMMING YOUR REMOTE

Your 7-in-1 NFL Universal Remote® will fulfill all of your remote control needs. This universal remote can control two televisions, a VCR player, a DVD player, a cable or satellite box, a receiver or AMP, and your AUX box.

There are three different methods to program your remote to all of your devices: manual search mode, quick search mode and auto search mode.

MANUAL SEARCH MODE

To program your remote under Manual Search Mode, first look up the three-digit code for your device in the “Device Codes” section of this manual. There may be several codes listed for your TV’s manufacturer.

If your device is not listed, try searching under Quick Search Mode or Auto Search Mode. Once you’ve found your device in the

list, follow these steps.

First press and hold the **SET** and **POWER** buttons until the LED turns on.

Then press the device key (**TV1**, **TV2**, **VCR**, **CATV**, **DVD**, **RCVR** or **AUX**) that you wish to program. The LED will flash once.

Then using the number buttons, enter the three-digit code for your device. After entering each button, the LED will flash once.

Then press the **ENTER** button to store the code number.

If the code has been entered correctly, the LED will flash three times and then turn off. Otherwise, if it doesn’t flash three times, you need to repeat all of the previous steps.

To test the code, point the football at the TV and press the power button. If the TV turns on or off, the correct code has been programmed. If your TV does not turn on or off, try the next code on the

IF NO KEY ON YOUR REMOTE IS PRESSED FOR 10 SECONDS, YOU NEED TO RESTART THE PROGRAMMING STEPS.

code list for your manufacturer.

QUICK SEARCH MODE

To program your remote under Quick Search Mode, first turn on the device you wish to program and point the remote toward it.

Then press and hold the **SET** and **POWER** buttons until the LED turns on.

Then press the device key (**TV1**, **TV2**, **VCR**, **CATV**, **DVD**, **RCVR** or **AUX**) that you wish to program. The LED will flash once.

Then press the **CH+** button followed by the **POWER** button to test if the code matches the device. Each time you press **CH+**, a new code is sent to your TV. When your TV turns off, **STOP**. You have found the right code. Do not hit the **CH+** key again. Press **ENTER** to save the code. Press the **POWER** key to verify that the TV turns on and off.

Please be patient. Your remote is searching through all of the codes and you may need to press **CH+** and **POWER** more than a

hundred times to find the correct code.

AUTO SEARCH MODE

To program your remote in Auto Search Mode, first turn on the device you wish to program and point the remote toward it.

Then press and hold the **SET** and **POWER** buttons until the LED turns on.

Then press the device key (**TV1**, **TV2**, **VCR**, **CATV**, **DVD**, **RCVR** or **AUX**) that you wish to program. The LED will flash once.


Then press the **CH+** button.

Then hold the **POWER** button for about two seconds until the LED turns on. Release the **POWER** button and the LED will flash slowly. Your remote is searching through all of the codes. Continue to point the remote at the device until your device responds.

If your device turns off, turn it back on and press the **CH+** button




7-In-1 NFL UNIVERSAL REMOTE®

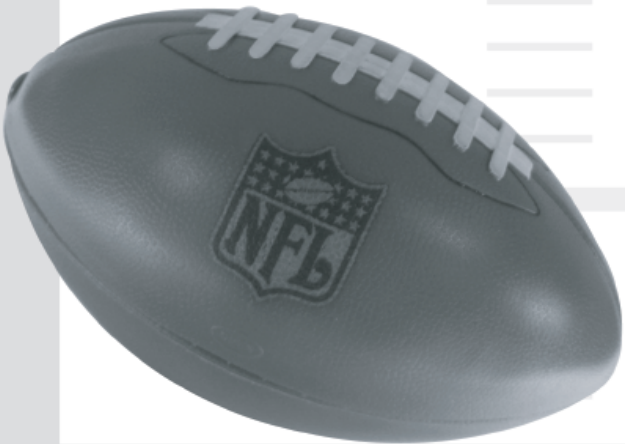

Model No. 201
www.ExcaliburElectronics.com

EXCALIBUR
ELECTRONICS, INC.

7-in-1 NFL Universal Remote® Layout

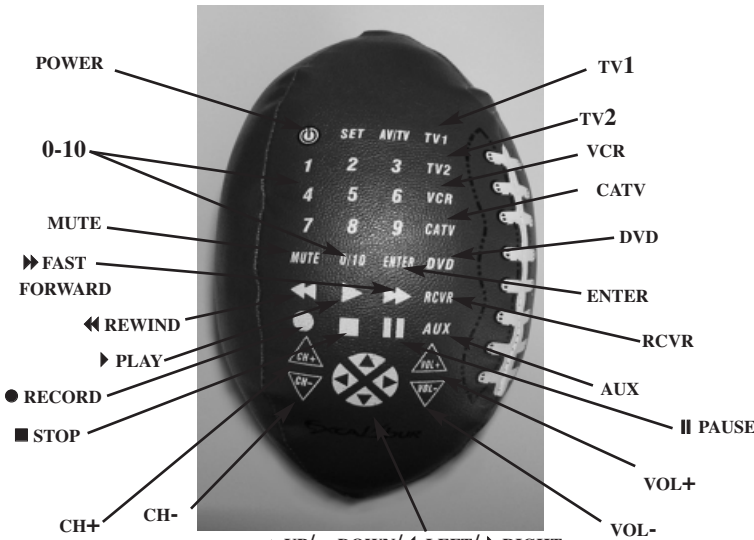

Button Functions

POWER: Press to turn your remote on or off.
SET: Press to set up a device.
ENTER: Press to confirm your selection.
Av/tv: Press to select your television or video.
Tv1: Press to select the television programmed under TV1.
Tv2: Press to select the television programmed under TV2.
VCR: Press to select your VCR player.
CATV: Press to select your cable box or satellite box.
DVD: Press to select your DVD player.
RCVR: Press to select your receiver or

AMP.
AUX: Press to select your CD player.
MUTE: Press to mute the sound.
NUMBERS: Press to select numbers one through nine.
0/10: Press to select either zero or ten.
CH+: Press to scroll one channel up or to scroll codes when programming under Quick Search Mode.
CH-: Press to scroll one channel down or to scroll codes when programming under Quick Search Mode.
VOL+: Press to increase the volume.
VOL-: Press to decrease the volume.

Congratulations on your purchase of 7-in-1 NFL Universal Remote®! The 7-in-1 NFL Universal Remote® puts all the convenience of a universal remote into the comfort and feel of a real football and is easy to use.

Before starting, please read this manual thoroughly, especially noting safety, care and battery information.

Keep this manual for reference.

Caution: Do not throw or toss your remote. Throwing it could cause injury.

© 2006 NFL Properties LLC. Team names and logos are trademarks of the teams indicated. All other (NFL-related marks) are trademarks of the National Football League.



The legendary King Arthur brandished a magic sword, Excalibur, from which we take our company name. With this unique weapon in his hands, he could not be vanquished.

Although Excalibur Electronics can’t claim the magical secrets of Merlin, King Arthur’s court wizard, sometimes our patented technology may make it seem as if we could.

We make you think!

◀ : Press to rewind in VCR or DVD mode.
▶ : Press to play in VCR or DVD mode.
⏩ : Press to fast forward in VCR or DVD mode.
● : Press to record in VCR or DVD mode.
■ : Press to stop in VCR or DVD mode.
⏸ : Press to pause in VCR or DVD mode.
▲ : Press to scroll up in a menu screen.
▼ : Press to scroll down in a menu screen.

◀ : Press to scroll left in a menu screen.
▶ : Press to scroll right in a menu screen.

Installing Batteries

Your remote requires two AA batteries, not included. Follow the steps below to install the batteries.

1. Place the seam side down in the palm of your hand.
2. Squeeze the area marked **OPEN** on both sides with your thumb and middle fingers.
3. Pull the top portion off to open the unit.
4. Push down on the arrow and simultaneously slide open the top of the battery compartment.

5. Insert the batteries matching the polarity (+ and -) with

the diagram inside the battery compartment.

6. Slide the lid back into its place.

7. Close the two halves of the football. You will hear a snap, indicating the unit is locked into place.

You are now ready to program your devices.

on your remote. Then press the **POWER** button and **CH+** button alternately until the device turns off and the code is correct. Press the **ENTER** button to confirm and store the code. The LED will flash three times and then turn off.

are trying to find is 102.

Press the **SET** button and **1**. The LED will flash one time.

Press the **SET** button and **2**. The LED will flash two times.

Press the **SET** button and **3**. The LED will flash three times.

FINDING YOUR DEVICE CODE

If your code is not available in the “Device Code” section, you can find out your device’s code after programming in Quick Search Mode or Auto Search Mode by following these steps.

First, press the device button on your remote.

Then press and hold the **SET** button. While holding the **SET** button, press 1 to find the first digit, 2 to find the second digit or 3 to find the third digit.

The LED flashing time will stand for each code number. If it doesn’t flash, it will stand for zero.

For example, the TV code you

AFTER YOU’VE PROGRAMMED YOUR REMOTE

After you’ve programmed your remote, you are now ready to use it for all of your remote needs.

To use, first press the device key for the device you wish to control.

Then press the function buttons that you wish to modify. For example, if you want to lower the volume of your television, press **TV1** (or **TV2**), then **VOL-**. You do not need to press the device button every time. Your remote will be set to the device last used.

EXCALIBUR ELECTRONICS, INC.
13755 SW 119TH AVENUE
MIAMI, FLORIDA 33186 U.S.A.


305.477.8080
305.477.9516 - FAX

WE MAKE YOU THINK!

Excalibur Electronics, Inc., reserves the right to make technical changes without notice in the interest of progress.

Play games live at:
www.ExcaliburElectronics.com

201 (MA) NFL Football Remote 080306 V2

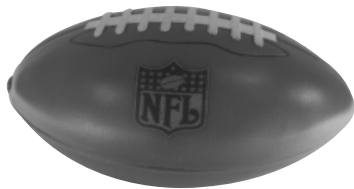

Device Codes

No.	Brand Name	No. of code	1	2	3	4	5	6	7	8	9	10	11	12	13
1	888	4	155	179	180	181									
2	A.R. System	4	281	283	296	343									
3	Accent	3	354	398	316										
4	Action	2	148	361											
5	Acura	1	148												
6	Admiral	7	002	014	009	160	360	204	306						
7	Agazi	1	160												
8	Aiko	9	284	285	366	361	198	296	204	333	148				
9	Aim	5	354	380	394	296	168								
10	Aiostay	1	148												
11	Aiwa	4	141	146	147	317									
12	Aika	12	003	148	168	160	179	180	181	254	333	303	314	296	
	Aika	12	284	354	366	367	368	371	416	415	197	361	198	313	
	Aika	12	200	237	239	250	286	381	338	310	209	343	380	392	
13	Aki	2	284	285											
14	Akiba	4	296	314	319	337									
15	Akio	1	220												
16	Akira	2	398	354											
17	Akito	1	318												
18	Akura	9	296	314	247	319	361	343	148	179	160				
19	Alba	12	296	371	420	314	404	208	332	209	336	368	343	359	
	Alba	3	333	367	148										
20	Albiral	12	281	283	282	290	191	357	358	322	325	343	367	368	
	Albiral	1	371												
21	Alcyon	1	304												
22	Alhori	2	284	285											
23	Allorgan	1	195												
24	Allstar	1	296												
25	Amplivision	1	334												
26	Amstrad	12	179	148	160	366	361	209	356	237	314	296	311	333	
	Amstrad	1	287												
27	Anam	1	148												
28	Anex	1	343												
29	Angal	2	135	173											
30	Anhua	120													
31	Anitech	9	361	354	296	301	325	304	148	160	179				
32	Ansonic	11	343	297	296	357	292	332	321	335	148	179	168		
33	Antarex	3	343	296	148										
34	Antecno	1	366												
35	Aoc	4	012	144	142	148									
36	Aolinpiya	4	160	179	180	181									
37	Ardem	1	321												
38	Aristonia (Phillips)	2	334	419											
39	Arthur Martin	050													
40	Art-Tech	2	148	319											
41	Asa	12	286	392	288	290	293	352	354	360	419	424	380	302	
	Asa	4	308	202	306	324									
42	Asberg	3	343	296	304										
43	Asthon	1	343												
44	Astra	6	354	382	361	277	209	148							
45	Astro Sound	5	367	368	371	325	343								
46	Asuka	6	366	367	368	371	314	364							
47	Atlantic	5	292	364	396	397	296								
48	Atoro	2	148	361											
49	Auchan	1	334												
50	Audinac	1	034												
51	Audiosonic	12	281	283	284	285	366	361	325	332	322	321	296	314	
	Audiosonic	3	343	319	160										
52	Audioton	5	160	148	284	285	361								
53	Audiovox	2	163	167											
54	Ausind	4	288	289	352	304									
55	Autovox	12	284	285	294	295	352	369	373	396	397	288	413	424	
	Autovox	3	324	304	306										
56	Awa	9	284	285	354	420	343	361	197	168	148				
57	Axxent	1	322												
58	Baihehua	9	145	152	153	163	165	166	169	170	148				
59	Baihua	5	148	160	179	180	181								
60	Baile	9	144	148	154	155	156	157	158	159	168				
61	Baird	3	197	303	328										
62	Bang & Olufsen	2	354	306											
63	Baoleshi	4	160	179	180	181									
64	Baosheng	2	143	148											
65	Barco	6	360	365	367	368	371	191							
66	Basic Line	8	168	148	366	303	194	296	314	319					
67	Baur	12	354	360	365	398	428	361	211	340	341	296	343	241	
	Baur	2	310	215											
69	Bcr	5	286	360	425	371	387								
70	Bei Jing	12	143	144	145	148	152	153	154	155	160	163	165	16	9
	Bei Jing	9	170	179	180	181	156	157	158	159	168				
71	Beko	3	321	332	343										

CAUTION: THE FOOTBALL REMOTE CONTROL SHOULD NOT BE THROWN TO ANOTHER PERSON. THE SENSOR LENS ON THE TIP OF THE FOOTBALL MAY CAUSE SERIOUS INJURY.

No.	Brand Name	No. of code	1	2	3	4	5	6	7	8	9	10	11	12	13
72	Bell & Howell				3	014	009	038							
73	Beon	1	296												
74	Besti	1	332												
74	Bestar	4	296	314	319	337									
76	Bifonic	2	284	285											
77	Blaupunkt	10	416	415	420	291	345	404	376	386	346	348			
78	Blausonic	2	284	285											
79	Blue Star	4	208	367	368	371									
80	Bpl	1	208												
81	Brandt	7	286	360	425	371	387	404	320						
82	Brendstar	1	361												
83	Brinkmann	1	296												
84	Brionvega	5	293	413	296	306	205								
85	Britannia	5	284	285	372	378	295								
86	Brocsonic	4	266	269	270	217									
87	Brokline	1	226												
88	Broksonic	3	003	012	072										
89	Brown	1	268												
90	Bruns	3	357	358	306										
91	Bsr	7	287	195	361	196	344	347	349						
92	Btc	1	314												
93	Bush (Ataki)	12	209	420	296	314	404	318	319	195	208	350	360	365	
	Bush (Ataki)	7	419	359	367	368	333	148	168						
94	Cai Hong	1	148												
95	Camper	1	321												
96	Candle	1	214												
97	Capehart	1	142												
98	Capasonic	1	343												
99	Carena	2	296	337											
100	Carrefour	2	420	302											
101	Cascade	1	148												
102	Casio	2	305	343											
103	Cathay	1	296												
104	Centurion	2	142	296											
105	Century	1	306												
106	Cfk	1	266												
107	Cge	12	364	367	368	371	336	347	351	352	361	288	332	322	
	Cge	2	343	304											
108	Cgm	8	366	361	409	236	321	322	209	343					
109	Chai Xing	8	145	152	153	163	165	166	169	170					
110	Chang Cheng	12	135	143	144	145	148	152	153	160	163	159	158	157	
	Chang Cheng	6	179	180	181	154	155	156							
111	Chang Fei	3	143	168	148										
112	Chang Feng	8	143	160	179	180	181	171	172	153					
113	Chang Hai	2	143	148											
114	Chang Hong	12	110	111	112	118	124	125	129	113	115	128	130	182	
	Chang Hong	12	183	181	141	163	165	166	169	170	179	180	143	145	
	Chang Hong	6	148	152	153	154	156	160							
115	Chang Du	2	143	148											
116	Chung Feng	5	160	179	180	181	148								
117	Chun Sun	2	143	148											
118	Cie	4	366	361	322	168									
119	Cihan	1	343												
120	Cimline	3	148	404	314										
121	City Corn	1	148												
122	Clairvox	7	281	283	296	305	354	282	290						
123	Ciatronics	9	296	332	357	314	209	304	333	160	148				
124	Cme	12	241	192	297	211	420	296	369	303	323	310	357	340	
	Cme	12	215	325	327	311	312	315	416	404	405	292	193	320	
	Cme	7	195	410	341	264	304	306	148						
125	Cornet	1	322												
126	Computron	2	354	361											
127	Concorde	2	361	148											
128	Condor	9	357	358	364	296	335	361	319	332	148				
129	Conic	1	382												
130	Conrowa	11	142	160	179	180	181	134	139	140	171	172	174		
131	Contec	8	285	195	361	420	350	192	310	148					
132	Continental Edison	8	320	216	343	286	360	371	387	425					
133	Cosmel	4	148	361	343	322									
134	Cosmos	1	148												
135	Coti	1	343												
136	Craig	4	022	034	020	021									
137	Crosiex	1	011												
138	Crosley	8	286	295	347	352	353	214	304	306					
139	Crown	7	034	354	366	361	220	236	273						
140	Crystal	2	321	343											
141	Cs Ellectronics	2	366	314											
142	Ctc Clatronic	12	284	285	357	358	366	367	343	325	209	371	368	179	
	Ctc Clatronic	1	148												
143	Curtis Mathis	4	003	019	034	354									
144	Cybertron	1	314												
145	Cyntic	7	281	283	284	285	367	368	371						
146	Cyv	1	343												
147	Da Xi Gu	1	148												
148	Da Yu	4	142	144	159	168									
149	Daewoo	12	284	285	354	366	218	220	242	260	296	314	322	343	
	Daewoo	11	197	321	035	036	003	041	029	148	144	159	168		
150	Daichi	1	361												
151	Danichi	2	314	326											
152	Dansai	3	382	296	160										
154	Dawa	3	354	296	343										
155	Daytron	5	013	148	168	142	361								
156	De Graaf	2	360	365											
157	Decca	12	281	283	284	285	354	356	359	192	298	197	222	296	
	Decca	2	303	318											
158	Degline	1	343												
159	Degraaf	3	147	419	313										
160	Denon	1	384												
161	Denver	3	148	361	322										
162	Demset	8	281	283	364	367	368	371	361	296					
163	Dewo	2	266	273											
164	Diamond	5	168	354	398	228	361								

No.	Brand Name	No. of code	1	2	3	4	5	6	7	8	9	10	11	12
522	Phoenix	2	296	306										
523	Phonola	3	306	297	296									
524	Pioneer	12	037	018	019	296	320	212	281	355	388	322	321	343
525	Plantron	3	148	160	296									
526	Policom	5	302	193	357	405	306							
527	Poppy	1	148											
528	Portland	4	003	008	322	343								
529	Prandoni Prince	11	281	283	304	286	295	347	289	288	352	360	325	
530	Precision	4	382	361	219	266								
531	Prima	7	160	148	179	284	285	382	361					
532	Princess	2	361	382										
533	Prinz	1	303											
534	Professor	1	343											
535	Profex	3	148	361	304									
536	Profi-Tronic	3	296	325	343									
537	Proline	3	303	297	296									
538	Prosat	1	282											
539	Prosonic	5	168	296	322	332	343							
540	Protech	10	160	148	354	236	296	357	321	336	343	322		
541	Proton	1	142											
542	Provision	1	231											
543	Pye	5	168	191	297	354	296							
544	Pymi	1	148											
545	Qin Dao	8	135	143	150	151	160	179	180	181				
546	Qin Yun	1	148											
547	Qualcraft	2	366	382										
548	Quasar	8	018	007	048	289	357	287	382	358				
549	Quelle	12	285	286	288	289	290	291	293	354	355	356	341	373
	Quelle	12	211	340	352	360	425	371	387	388	424	381	322	420
	Quelle	11	343	308	241	192	370	374	375	390	296	302	324	
550	Qvestar	1	420											
551	Radio Shack	4	002	012	024	023								
552	Radiola	7	296	297	286	360	425	371	387					
553	Radiomarelli	5	286	360	425	371	387							
554	Radionette	10	286	295	347	349	351	353	245	202	354	381		
555	Rank	3	420	302	350									
556	Rank/Rbm	10	286	295	347	360	365	367	368	371	350	288		
557	Rca/Proscan	11	002	003	004	005	006	007	008	044	045	046	053	
558	Realistic	2	156	163										
559	Recor	3	354	398	343									
560	Rediffusion	11	286	295	347	237	360	368	371	387	418	425	421	
561	Reflex	3	236	322	343									
562	Regente	1	361											
563	Rex	7	292	349	360	396	397	335	160					
564	Rft	6	321	303	305	325	323	306						
565	Rhinex	1	275											
566	R-Line	1	296											
567	Rm2000	3	236	322	343									
568	Rmb	1	302											
569	Roadstar	9	314	236	366	361	382	256	230	246	148			
570	Robotron	1	306											
571	Rotel	1	350											
572	Rowsonic	2	284	285										
573	Royal	6	284	285	354	366	232	361						
574	Roz	3	367	368	371									
575	Ruyi	10	143	145	147	152	153	163	165	166	169	170		
576	Saba	12	281	283	286	295	347	360	371	387	388	310	401	320
577	Saccs	1	290											
578	Sagem	2	225	337										
579	Sai Ge	2	143	148										
580	Saisho	12	284	285	287	356	359	366	404	416	196	298	311	192
	Saisho	2	160	148										
581	Sakura	1	361											
582	Salora	12	286	371	385	378	387	389	390	394	399	402	411	410
	Salora	11	202	372	360	365	312	295	194	380	386	428	392	
583	Sambers	12	281	283	285	288	289	290	352	357	358	364	410	325
584	Sampo	5	142	148	354	361	410							
585	Samsung	12	160	148	142	170	164	165	166	169	012	013	003	055
	Samsung	12	284	285	287	354	197	206	1160	332	227	234	267	296
	Samsung	9	213	322	219	382	410	303	307	313	026			
	San Yuan	12	136	143	145	148	149	152	153	163	165	166	169	170
586	Sandra Color	3	405	284	285									
588	Sanijan	4	160	179	180	181								
589	Sankyo	1	343											
590	Sansui	2	296	250										
591	Sanyo	12	148	140	134	139	146	147	160	162	179	180	181	137
	Sanyo	12	422	423	286	420	421	295	347	381	384	197	299	303
	Sanyo	12	305	308	310	361	313	199	322	323	329	332	271	192
	Sanyo	3	025	023	054									
592	Sbr	10	293	350	354	356	359	386	369	296	297	168		
593	Schaub Lorenz	6	236	319	322	343	148	168						
594	Schneider	12	286	288	292	295	347	352	353	360	361	363	365	367
	Schneider	12	325	215	284	285	236	314	297	296	371	387	322	209
	Schneider	12	366	368	300	382	369	333	425	340	343	354	168	148
595	Scott	7	034	012	364	381	268	343	142					
596	Sears	1	142											
597	Seg	12	357	358	286	360	420	296	425	305	311	322	195	367
	Seg	9	236	241	387	325	368	371	343	160	148			
598	Seiko	1	168											
599	Sei-Sinudyne	1	241											
600	Seleco	12	354	367	368	371	420	322	335	343	204	292	380	396
	Seleco	2	397	416										
601	Semivox	1	200											
602	Senday	1	343											
603	Sentra	6	367	368	371	200	314	316						
604	Setron	1	148											
605	Shan Cha	5	143	160	179	180	181							
606	Shan Yang	1	148											
607	Shang Hai	12	143	145	148	152	153	160	163	165	166	169	170	179
	Shang Hai	5	141	180	181	182	183							
608	Shao Feng	5	143	147	134	139	152							
609	Sharp	12	014	013	015	070	136	148	149	388	424	195	310	316
	Sharp	4	420	350	366	377								
610	Shen Yang	5	143	148	172	171	160							
611	Shencai	6	139	148	160	179	180	181						
612	Sherwood	1	148											
613	Shintoshi	1	322											
614	Shivaki	1	322											
615	Shorai	1	195											
616	Shov	1	148											

No.	Brand Name	No. of code	1	2	3	4	5	6	7	8	9	10	11	12
617	Show	1	361											
618	Siarem	9	286	295	347	357	358	281	353	325	306			
619	Scatel	7	367	368	371	282	290	350	388					
620	Sidac	3	367	368	371									
621	Siemans	7	382	198	291	296	343	341	310					
622	Sierra	3	296	297	332									
623	Signature 2000	3	014	009	142									
624	Silma	3	361	343	148									
625	Silver	5	148	179	420	366								
626	Simpson	2	148	214										
627	Simtel	1	343											
628	Singer	12	281	283	286	295	347	246	322	306	361	204	209	334
	Singer	8	325	284	285	354	358	353	357	168				
629	Sinudyne	12	286	287	344	353	354	357	360	371	295	387	425	246
	Sinudyne	12	359	195	196	208	404	358	366	343	347	325	311	148
630	Sirel	2	281	283										
631	Skyworth	12	91	92	99	105	106	113	114	115	119	120	126	118
	Skyworth	12	130	185	171	172	145	148	152	185	153	163	165	166
	Skyworth	2	169	170										
632	Slava	2	284	285										
633	Solavox	12	349	351	353	367	368	371	372	378	295	380	389	286
	Solavex	2	392	303										
634	Songba	1	148											
635	Sonitron	3	284	285	192									
636	Sonoko	9	366	222	361	343	296	319	322	148	160			
637	Sonolor	2	313	334										
638	Sontec	6	332	343	296	322	195	148						
639	Sony	12	148	167	175	138	145	153	163	165	166	169	170	001
	Sony	11	420	354	241	192	428	356	426	427	430	211	336	
	Sonycs	2	322	343										
	Sound Color	4	322	209	343	237								
642	Sound & Vision	4	357	314	325	168								
643	Soundesign	2	142	214										
644	Soundmaster	2	148	361										
645	Soundwave	2	336	296										
646	Sowa	2	148	142										
647	Srypton	3	322	343	296									
648	Standard Comp	11	322	284	366	361	364	285	343	296	314	148	168	
649	Star Lite	6	296	322	361	343	354	148						
650	Starlux	1	322											
651	Stenway	2	314	319										
652	Stern	3	396	292	397									
653	Stvi	5	284	367	285	368	371							
654	Sun Moonstar	2	297	286										
655	Sunkai	12	292	366	408	409	288	314	404	337	208	387	425	195
	Sunkai	4	371	196	286	360								
656	Sunstar	1	297											
657	Sunwatt	1	354											
658	Superla	5	281	283	367	368	371							
659	Super-Macy	1	214											
660	Supersonic	3	354	398	209									
661	Supertec	1	148											
662	Supertech	5	366	361	296	322	343							
663	Supra	3	168	148	361									
664	Supreme	1	290											
665	Sutron	1	148											
666	Syc Line	2	148	361										
667	Sydney	2	281	283										
668	Sylvania	5	011	012	003	073	214							
669	Symphonic	4	023	039	040	034								
670	Synco	1	142											
671	Sysline	1	296											
672	Tai Shan	8	143	148	168	159	158	157	156	155				
673	Taiyi	1	148											
674	Talent	1	361											
675	Tamashi	1	270											
676	Tandberg	6	424	281	283	193	207	324						
677	Tandy	5	360	365	314	388	303							
678	Tashiko	7	284	285	360	365	369	420	296					
679	Tatung	12	281	284	285	295	347	354	192	197	222	283	356	358
	Tatung	5	322	343	296	303								
680	TCL	12	132	86	87	89	90	93	94	95	98	107	108	109
	TCL	12	121	114	115	118	119	120	153	163	165	166	169	170
	TCL	5	179	180	181	172	145	152						
	Teak	6	284	285	354	398	361							
681	Team	1	366											
682	Tec	5	284	285	287	361	148							
683	Techline	1	343											
684	Technica	1	366											
685	Technics	1	416											
686	Technisat	2	305	343										
687	Technol	4	284	285	354	398								
688	Technovision	1	229											
689	Teco	1	148											
690	Tedelex	8	284	285	354	367	368	371	361	238				
691	Teinel	3	367	368	371									
692	Teknant	4	148	361	343	274								
693	Teknika	1	214											
694	Teleavia	5	286	360	371	387	425							
695	Telechrom	1	366											
696	Telecor	3	296	314	292									
697	Telefac	2	361	428										
698	Telefunken	8	388	296	225	267	328							
699	Telegazi	4	296	314	292	160								
700	Telektron	1	325											
701	Teleopta	2	148	361										
702	Telesonic	1	296											
703	Telestar	2	361	343										
704	Teletech	2	148	343										
705	Teleton	1	193											
706	Televideon	7	284	285	286	289	295	347	364					
707	Telexa	1	325											
708	Telkom	1	343											
709	Temco	1	195											
710	Tempest	4	284	366	361	285								
711	Tenghua	1	148											
712	Teniel	1	343											
713	Tensai	12	284	285	357	358	366	343	326	325	195	322	333	236
714	Tensai	12	209	314	367	361	202	354	364	368	296	371	382	148
	Tensai	1	168											